

Phason Supra
 Tue Feb 12, 2008
 11:32:14 AM
 Outside: 79.6°F

- MAIN MENU**
- 1 Settings
 - 2 Maintenance
 - 3 View Logs
 - 4 Security
 - 5 Configuration
 - 6 Diagnostics
 - 7 Factory Settings

- SETTINGS**
- 1 Group Setpoint
 - 2 Heat/Cool Stages
 - 3 Variable Stages
 - 4 Growth Curve
 - 5 Curtains
 - 6 Alarms
 - 7 Actuators
 - 8 Duty Cycle
 - 9 Timed Events
 - 10 Water Meter
 - 11 Humidity Control
 - 12 Temp Setback
 - 13 Tunnel Mode

- MAINTENANCE**
- 1 Manual Override
 - 2 Calibrate Actuator
 - 3 Set Clock
 - 4 Switch F/C
 - 5 Set Unit Name
 - 6 Set Main Display
 - 7 Hysteresis
 - 8 De-Icing
 - 9 Warnings
 - 10 Temperature Probe
 - 11 Motor Curves
 - 12 Averaging On/Off
 - 13 Averaging Setup
 - 14 Humidity Factor
 - 15 Startup Timer
 - 16 Restore Settings
 - 17 Save Settings


- VIEW LOGS**
- 1 Daily Log
 - 2 Alarm Log
 - 3 Audit Log
 - 4 Erase All Logs

- SECURITY**
- 1 Security On/Off
 - 2 Change PIN
 - 3 Add User
 - 4 Remove User

- CONFIGURATION**
- Relay Stages 1 to 12
 - Variable Stages 1 to 4
 - 0 to 10-V outputs 1 to 4
 - Humidity Zone

- DIAGNOSTICS**
- 1 Display All Inputs
 - 2 Power Supply
 - 3 View relay stages
 - 4 Set relay stages
 - 5 View VAR Stages
 - 6 Set VAR Stages
 - 7 Change Version
 - 8 Force Reset

Restore factory settings

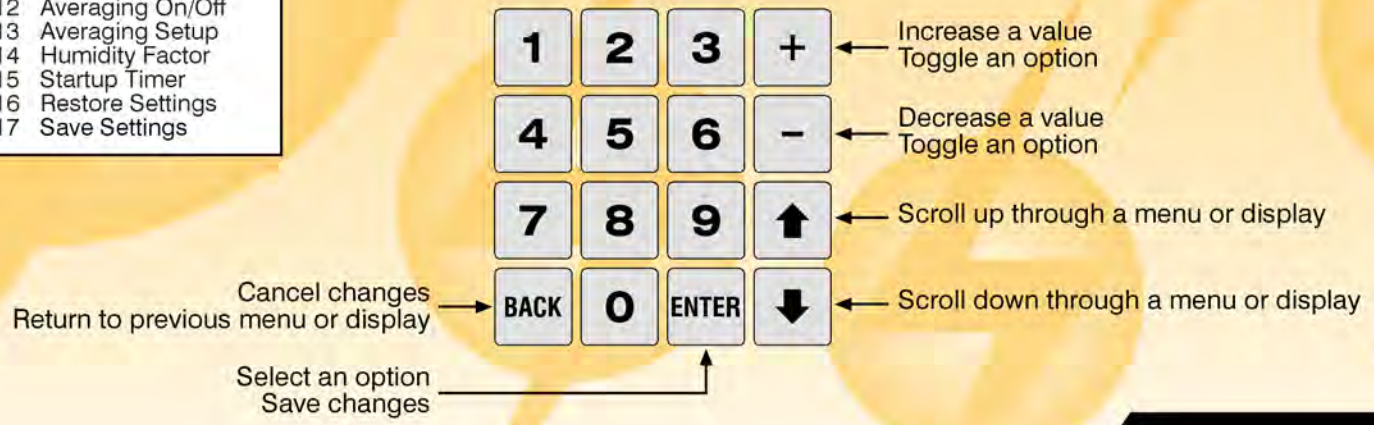

21040107