



INSTALLATION INSTRUCTIONS INSTRUCCIONES DE MONTAJE



Safety instructions / Instrucciones de seguridad

Precautions / Precauciones:

It is important that you read, fully understand and observe the following safety instructions as well as the installation instructions. Careless or improper handling may cause injury or property damage.



Es importante que lea, comprenda completamente y respete las siguientes instrucciones de seguridad, así como las instrucciones de montaje. El manejo descuidado o inadecuado puede causar lesiones o daños a la propiedad.

Good footwear is very important. Wear sturdy boots with nonslip soles. Steel-toed safety boots are recommended.



Un buen calzado es muy importante. Póngase botas gruesas con suela antideslizante. Recomendamos las botas de seguridad con puntera de acero.

Knee-protection is recommended!



¡Recomendamos la protección de rodilla!

Always wear gloves when handling and installing the mats. Heavy-duty, nonslip gloves improve your grip and help to protect your hands.



Siempre use guantes cuando maneje y monte los pisos de goma. Los guantes gruesos y antideslizantes mejoran el manejo y ayudan a proteger las manos.

During installation / durante el montaje:

Do not stand or work under suspended load (pallet)!



¡No se pare ni trabaje bajo carga suspendida (palet)!

- Do not underestimate the weight of the mats. Improper handling may cause injury.
- Only use the recommended tools.
- Observe the safety instructions of the tools' manufacturers.
- Caution when cutting: blade may move quickly through the rubber mat. Be sure you are cutting away from your body.
- Pallets can be broken! Watch out for splinters and / or nails!
- Take care to remove edge protectors or other small parts of packaging from cow feeding areas!



- *No subestime el peso de los pisos de goma. El manejo inadecuado puede causar lesiones.*
- *Solo use las herramientas recomendadas.*
- *Respete las instrucciones de seguridad de los fabricantes de herramientas.*
- *Tenga cuidado al cortar: la cuchilla puede moverse rápidamente a través del piso de goma. Asegúrese de estar cortando lejos de su cuerpo.*
- *¡Los palets se pueden romper! ¡Cuidado con las astillas y / o los clavos!*
- *¡Tenga cuidado de quitar los protectores de bordes u otras partes pequeñas de los envases de las áreas de alimentación de las vacas!*

After installing / después del montaje:



Caution!
Cows will be more active!

*¡Cuidado!
¡Las vacas podrían ser más activas!*



Watch out for uneven edges if the floor is only partially covered.

Tenga cuidado con los desniveles en los bordes si el piso está cubierto solo parcialmente.



Residues on the rubber may cause slippery condition while and shortly after installing!

¡Los residuos sobre la goma pueden causar condiciones resbalosas durante y poco después del montaje!

KRAIBURG SIESTA

Requirements:



concrete area:


- smooth
- clean
- minimum 4" (10 cm) thick
- no holes
- level off uneven surfaces
- maximum 3% slope

mats:


Installation Temperature:
minimum 41°F (5°C) to maximum 86°F
(30°C) (be sure internal temperature of
mats falls within above range)

You will need this:


measuring:

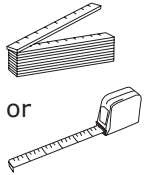


marking:

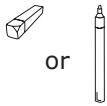

cutting:

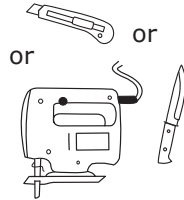

drilling and installing:

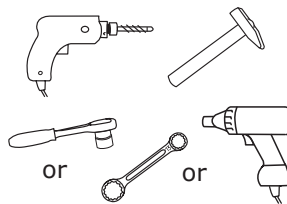



fastening components:

- 1/4" x 3" steel anchors
- 5/16" x 1-1/8" SS curved washer


(or fastening components with at least the same resistance and durability)



LAYOUT OPTIONS:

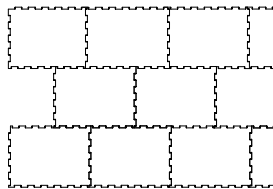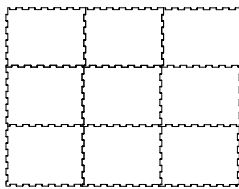


Tractor/Skid Steer Scrapers:
comply with **KRAIBURG**
guidelines for
trafficability

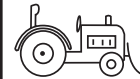


tip: To make the stress free installation even easier, we recommend dividing large areas evenly and leaving an expansion gap of up to 1" (2 cm) at least every 39' (12 m).

1 Lay out mats


Start at a straight edge!

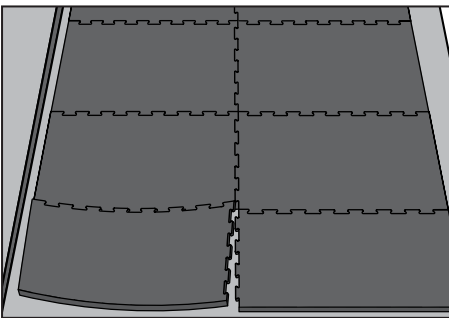

lay out complete area

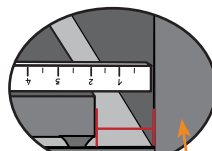


1" (2 cm)
distance to side edge:
1" (2 cm)
(min. 1/4" to max. 2-1/4"
(1-6 cm))

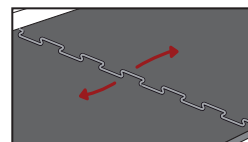


join mats loosely, lift them slightly and gently pull them apart

! avoid creating tension!

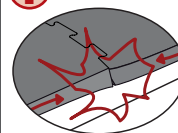

DO NOT PRESS!

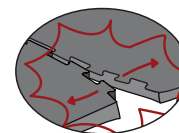


DO NOT PULL ON ONE SIDE ONLY!


! at low temperatures: pull the puzzle seams so far apart that an opening becomes visible



2 Custom Trimming

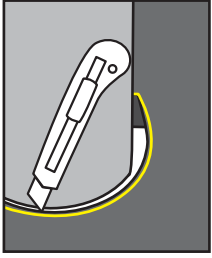


if necessary,
cut mats to fit

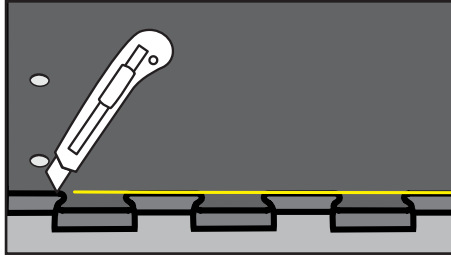

excess puzzle edges can be cut
off at the beginning and end of
an area

tips for cutting:

- moisten the blade lightly
- pull the mats slightly
apart (use pliers for
pulling small pieces
apart)

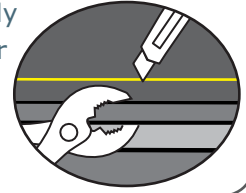


3 Fasten


! 1/4" x 3" steel anchors
5/16" x 1-1/8" washer

! if some mats are cut at site:
add additional anchors in comparable distances
on the mat edge!


fasten through prefabricated holes:

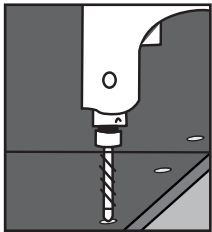

drill


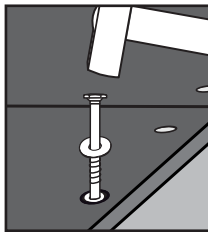


pound in anchors and washers
until they are seated firmly and are
slightly countersunk

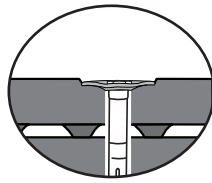

i small areas
up to approx.
160 ft² can be
laid out with
no anchoring


i tip: check to see if the
fastening can be felt
with a flat object made
of metal (e.g. hammer)
by sliding it over the
fastening. If it can be felt,
pound it in deeper!

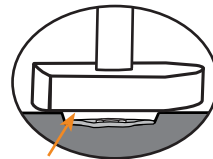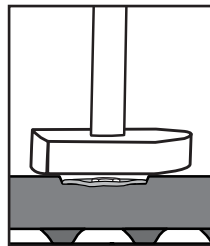

a small gap
should be visible

! do not pound in too strongly!

no tensions
should
develop, the
mat should
not bulge!

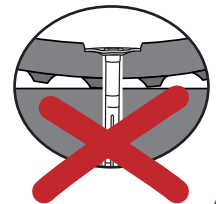

Appropriate installation may differ due to local conditions.
Therefore the manufacturer is not liable for installation!



KRAIBURG SIESTA - US - 2/2019 - I