




Agromatic^{INC}

EasySwing Ground Installation Kit Guide

Designed for use with the EasySwing Totem Brush

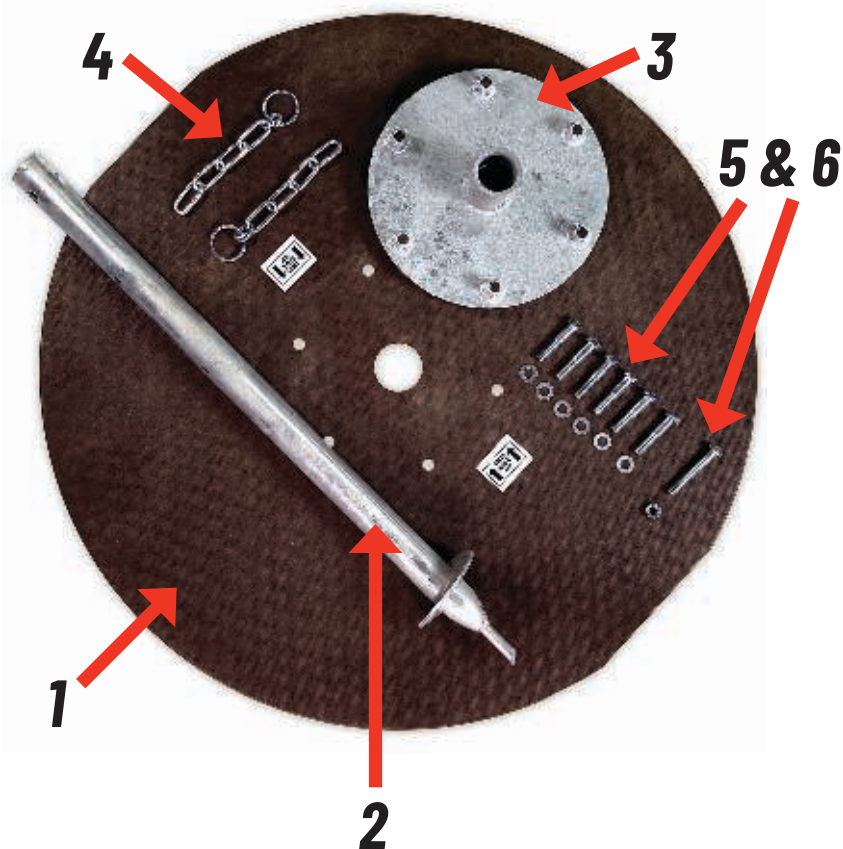

Parts List:

1. Base Plate	1 qty.
2. Screw Post	1 qty.
3. Base attachment	1 qty.
4. Chains	2 qty.
5. 16x80 mm bolts + washers	6 qty.
6. 16x100 mm bolts + washer	1 qty.

Required for Assembly:

- 24 mm socket
- Ratchet or drill
- Shovel
- 7/8" or less rod for turning in screw post





Agromatic^{INC}

1. Lay out all material and find a level area for installation



2. Lay base plate on ground and work around edges with shovel



3. Move base plate and dig out area approx. 2-3" deep so base plate will sit just below ground level





Agromatic^{INC}

4. Mark center of base plate so you know where to turn in screw post



5. Run rod through top hole and begin turning in screw post




6. Once screw post is securely in ground (approx. 12 to 18") use 16x100 mm bolt to attach TOTEM base attachment to screw post






Agromatic^{INC}

7. Attach included chains using two 16x80mm bolts and continue using your rod to turn screw post and TOTEM base attachment the rest of the way into the ground

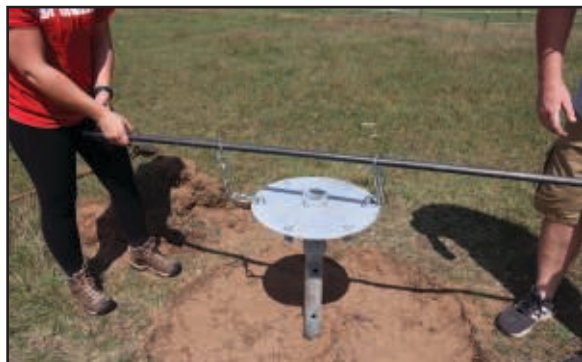

8. Remove chains

9. Replace base plate - the center hole will align with the TOTEM base attachment

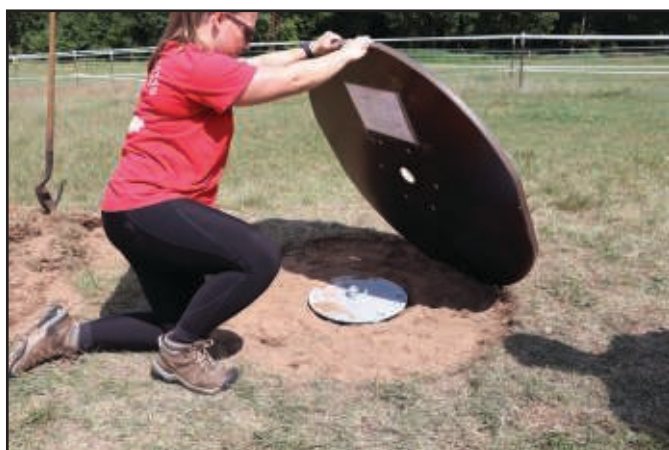

Now let's assemble your TOTEM brush!



Agromatic^{INC}

10. Align holes of TOTEM floor stand with coordinating holes on base plate and use six 16x80 mm bolts and washers to secure in place



11. Attach lower frame to floor stand using six 16x30 mm bolts and washers and secure



12. Attach upper frame to lower frame using six 16x30 mm bolts and washers





Agromatic^{INC}

13. Insert disc assembly guide into channel and begin assembling brush discs following this diagram →



Note:
last two discs
should be doubled up

14. Install tensioner lid with 16x50 mm bolt and washer

